

G503 WWII Jeep Thermostat

This Article describes how install your WWII Jeep thermostat on your go devil engine. Applies to 1942,42,1943,43,1944,44,1945 Jeeps models


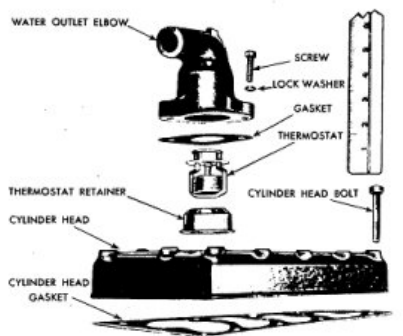


Figure 46—Thermostat, Disassembled

RA PD 300230

The WWII jeep thermostat is a very simple item to install and/or replace. But this little guy can be a sneaky problem when your vehicle is not running well. Here are the parts involved with the thermostat.

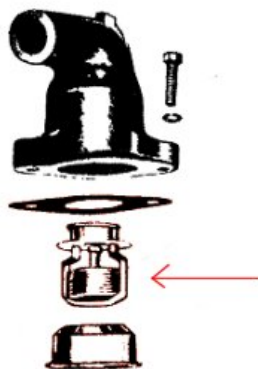


When you order a new thermostat you will most likely be given a 180 degree thermostat. If you live where there is a lot of heat most the year, you may want to go with the 160 degree thermostat



First, you want to drain your coolant from your radiator and your block



Next, disconnect the upper radiator hose from the thermostat housing

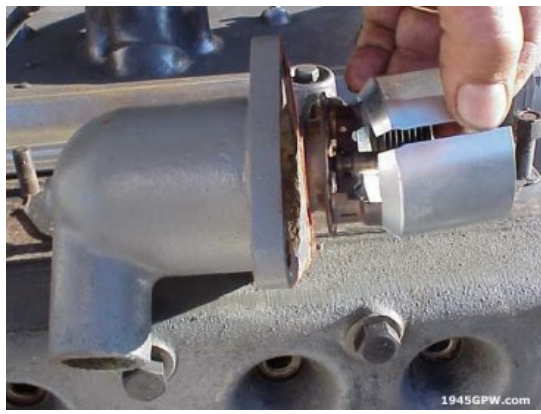

remove the thermostat housing and remove existing thermostat if there. Prepare to insert new thermostat by placing the thermostat in the thermostat retainer.



Place the thermostat retainer and thermostat into the housing.



Clean the surface on the head from any existing gasket residue. Apply some gasket sealer on both sides of the new gasket and line up the housing on the block. Install the three bolts to hold the housing in place. Reattach the radiator hose to thermostat housing.